 


**PORTABILITY THAT PRINTS.  
SHARE SPECIAL MOMENTS  
ON THE GO.**

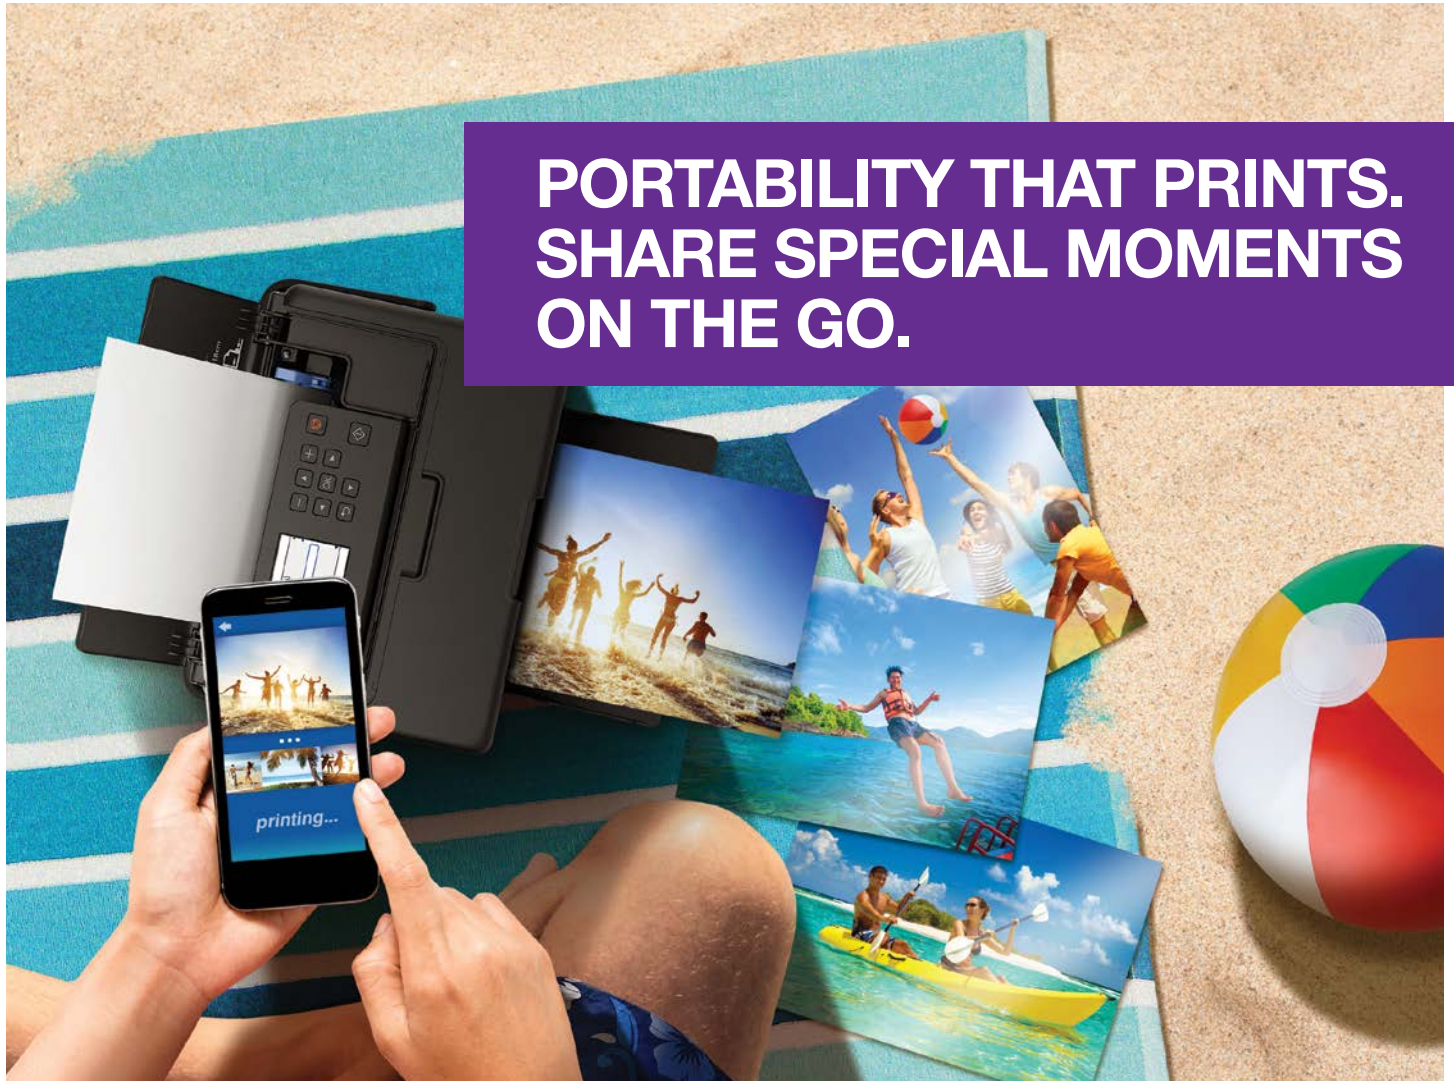

With Epson PictureMate PM-520, you can now capture special moments on the go, connect wirelessly to the printer, print and share them instantly. Prints are borderless and up to 5 x 7" in size and with Epson Micro Piezo™ technology, they are both high-quality and long-lasting. The 2.7" LCD screen also makes picture selection and adjustment a breeze no matter where you go.



Borderless Photo Printing



Print 5760dpi



2.7" LCD Screen



Wi-Fi Direct



Epson Connect



Optional Battery



**IT'S IN THE DETAILS.**

**Brilliant Prints Every Time**

Epson Micro Piezo printhead delivers sharp, borderless prints of up to 5 x 7" quickly and effortlessly.

**Wireless Connectivity**

Wi-Fi and Wi-Fi Direct allow for wireless printing wherever you go. PM-520 supports Epson Connect features too.


**Convenience in Every Way**

Manage photos easily with a 2.7" LCD screen. PM-520 supports SD card, USB Flash Drives and PictBridge connectivity.

<b>MODEL NUMBER</b>	<b>PM-520</b>	
<b>Printing</b>		
Print Method	On-demand inkjet	
Nozzle Configuration	180 nozzles Black, 180 nozzles per colour (Cyan, Magenta, Yellow)	
Print Direction	Bi-directional printing, Uni-directional printing	
Maximum Resolution	5,760 x 1,440 dpi (with Variable-Sized Droplet Technology)	
Minimum Ink Droplet Volume	2 pl	
Print Speed <sup>*1</sup>	Photo Default - 10x15 cm/4x6" <sup>*2</sup> Approx. 36 sec per photo (Borderless)	
<b>Paper Handling</b>		
Paper Feed Method	Friction feed	
Paper Hold Capacity		
Input Capacity	50 sheets, A5 Plain paper (75 gsm) 20 sheets, Premium Glossy Photo Paper	
Output Capacity	20 sheets, A5 Plain Paper 20 sheets, Premium Glossy Photo Paper	
Paper Size	A5, A6, 9 x 13 cm (3.5 x 5 in), 10 x 15 cm (4 x 6 in), 13 x 18 cm (5 x 7 in), 16:9 wide size Envelopes: #10, DL, C6	
Maximum Paper Size	136 x 420 mm	
Print Margin	0 mm top, left, right, bottom via custom settings in printer driver <sup>*3</sup>	
<b>Interface</b>		
USB	USB 2.0	
Network	Wi-Fi IEEE 802.11b/g/n, Wi-Fi Direct	
<b>Mobile and Cloud Printing</b>		
Epson Connect	Epson iPrint, Epson Email Print, Epson Remote Print Driver	
Other Mobile Solutions	Apple® AirPrint™, Google Cloud Print™, Mopria™ Print Service	
<b>Control Panel</b>		
LCD Screen	2.7" Colour LCD	
<b>Card Slot</b>		
Supported Memory Cards	SD, SDHC, SDXC, MiniSD (With Adapter), MiniSDHC (With Adapter), MicroSD (With Adapter), MicroSDHC (With Adapter), MicroSDXC (With Adapter)	
Supported File Formats	JPEG	
<b>Printer Software</b>		
Operating System Compatibility	Windows XP / Vista / 7 / 8 / 8.1 / 10 Mac OS X 10.6.8 or later	
<b>Electrical Specifications</b>		
Rated Voltage	AC 100-240V	
Rated Frequency	50 - 60 Hz	
Power Consumption		
Operating	12 W	
Standby	5.0 W (Not Charging), 24 W (Charging)	
Sleep	1.0 W (Not Charging), 22 W (Charging)	
Power off	0.2 W (Not Charging), 22 W (Charging)	
<b>Noise Level</b>		
PC Printing / Premium Glossy Photo Paper Best Photo	5.3 B(A), 40 dB(A)	
PC Printing / Plain Paper Default <sup>*4</sup>	5.3 B(A), 41 dB(A)	
<b>Consumables</b>	<b>Page Yield <sup>*5</sup></b>	<b>Order Code</b>
Photo Ink Cartridge	160 Photo Prints	C13T372090
Maintenance Box	-	C13T295100
<b>Options</b>	<b>Order Code</b>	
PictureMate Battery	C12C932941	

**Dimensions & Weight**

**Weight:** 2.3 kg (5.1 lb)

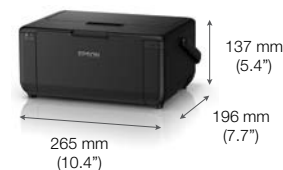

<sup>\*1</sup> Photo print speed is calculated when printed on 10 x 15 cm Epson Premium Glossy Photo Paper with the default print settings. Print speed may vary depending on system configuration, print mode, document complexity, software, type of paper used and connectivity. Print speed does not include processing time on the host computer. The thumbnail image below shows the print pattern that was used to determine the print speed.



<sup>\*2</sup> When printed on Epson Premium Glossy Photo Paper.  
<sup>\*3</sup> Otherwise 3mm top, left, right, bottom. 10mm each side for A5.

<sup>\*4</sup> Default mode in accordance with ISO7779.

<sup>\*5</sup> In accordance with ISO/IEC 29102. Actual yields will vary considerably for reasons including images printed, print settings, temperature and humidity. Yields may be lower when printing infrequently or predominantly with one ink colour. A variable amount of ink remains in the cartridges after the "replace cartridge" signal. Part of the ink from the first cartridges is used for priming the printer. Ink is used for both printing and print head maintenance. All inks are used for both black and colour printing.

© 2019 Epson Singapore Pte Ltd. All Rights Reserved. Reproduction in part or in whole, without the written permission from Epson, is strictly prohibited. EPSON and EXCEED YOUR VISION are registered trademarks of Seiko Epson Corporation. All other products names and other company names used herein are for identification purposes only and are the trademarks or registered trademarks of their respective owners. Epson disclaims any and all rights in those marks. Print samples shown are simulations only. Specifications and product availability are subject to change without notice and may vary between countries. Please check with local Epson offices for more information.

Apple, iPad and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android is a trademark of Google Inc.

Information correct as at June 2019